


Self-aligning Clutch-release Bearings

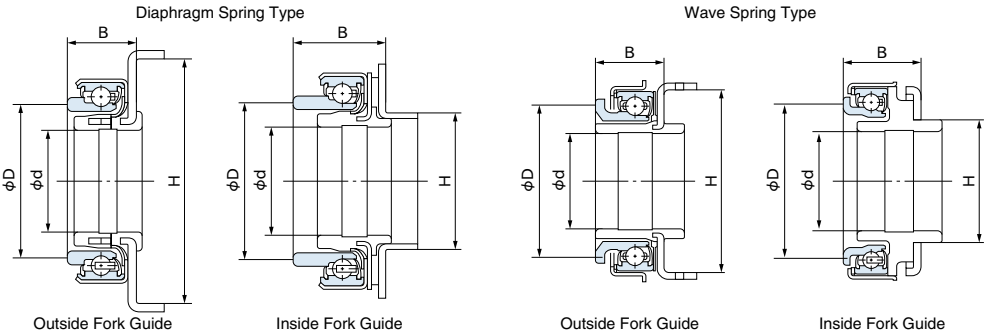

Bearing No.	Boundary dimensions (mm)				Type	
	d	D	B	H	Spring	Fork Guide
44SCRN28P-8	28.1	44	22	35	Wave	Inside
47SCRN31P-1	29	47	20.5	56	Wave	Outside
47SCRN34K-6	29	47	21	38	Diaphragm	Inside
47SCRN40P	31	47	23	68	Diaphragm	Outside
48SCRN32K	31.75	48	21	60	Diaphragm	Outside
50SCRN31P	33	50	22	70.15	Diaphragm	Outside
50SCRN31P-1	33	50	22	79.2	Diaphragm	Outside
50SCRN34P-4	35	50	24	44	Diaphragm	Inside
50SCRN37P-4	35	50	26.9	44	Diaphragm	Inside
50SCRN40P-4	35	50	30	44	Diaphragm	Inside
54SCRN42P	36	54	27	77	Diaphragm	Outside
55SCRN41P	35	55.2	24	72	Diaphragm	Outside
55SCRN41P-1	35	55.2	24	72	Diaphragm	Outside
58SCRN37P	35	58	26.6	44	Diaphragm	Inside
58SCRN43A	35	58	33	44	Diaphragm	Inside
60SCRN31T	35	60	25	76	Diaphragm	Outside
60SCRN31P-6	35	60	25	79.2	Diaphragm	Outside
68SCRN43A	35	68	33	44	Diaphragm	Inside
68SCRN46P-2	38	68	34	48	Diaphragm	Inside
68SCRN48P	38	68	37.5	48	Diaphragm	Inside
68SCRN53P	38	68	42.5	48	Diaphragm	Inside
68SCRN58P-4	38	68	47.5	48	Diaphragm	Inside
68SCRN58P-5	38	68	47.5	48	Diaphragm	Inside
68SCRN62P	38	68	51.6	48	Diaphragm	Inside
68SCRN63P-2	35	68	53.3	48	Diaphragm	Inside